



# **Megapixel IP IR DN PoE Bullet Camera** (with DC 12V / PoE) **ACM-1511 series**

Ver. 120312

## **Quick Installation Guide**



[www.acti.com](http://www.acti.com)



# 1

## Getting Started

### 1.1 PACKAGE CONTENTS

ACM-1511 series  
(DC12V / PoE)



The bracket is not included

Product CD




Terminal Block for Power



Warranty Card



## 1.2 PHYSICAL DESCRIPTION

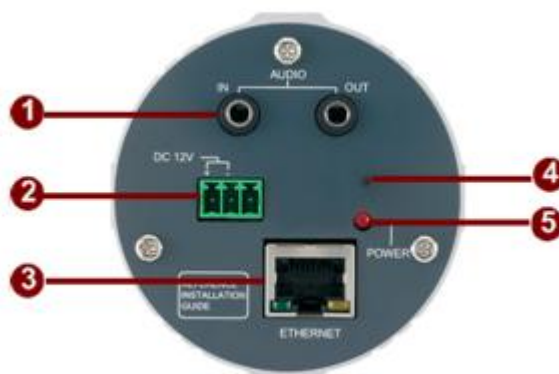


### 1. Audio Input / Output

The Megapixel IP IR DN PoE Bullet Camera supports audio input and output with earphone jack

### 2. Power Input

If your power input is DC12V , please follow the description on the connector to connect to power.

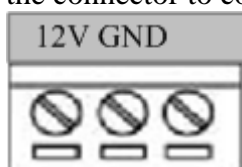

PIN	NAME	DESCRIPTION
1	12V	DC Power Input
2	GND	Ground Pin

### 3. Ethernet Port

The Megapixel IP IR DN PoE Bullet Camera connects to the Ethernet via a standard RJ45 connector. Supporting NWAY, this Megapixel IP IR DN PoE Bullet Camera can auto detect the speed of local network segment (10Base-T/100Base-TX Ethernet).

### 4. Reset Button

**Step 1:** Switch off Megapixel IP IR DN PoE Bullet Camera by disconnecting the power cable

**Step 2:** Press and continue to hold the Reset Button. Reconnect

the power cable while continuing to hold the reset button.


**Step 3:** Keep holding the reset button depressed for a while, release the reset button. The unit will start up with factory default settings.

**5. Power LED Indicator**

The LED indicator lights up one time upon power up. It will lights up again when this Megapixel IP IR DN PoE Bullet Camera is fully booted up.

## 1.3 BASIC CONNECTIONS

Follow the procedures below to connect the Megapixel IP IR DN PoE Bullet Camera to the respective apparatuses.

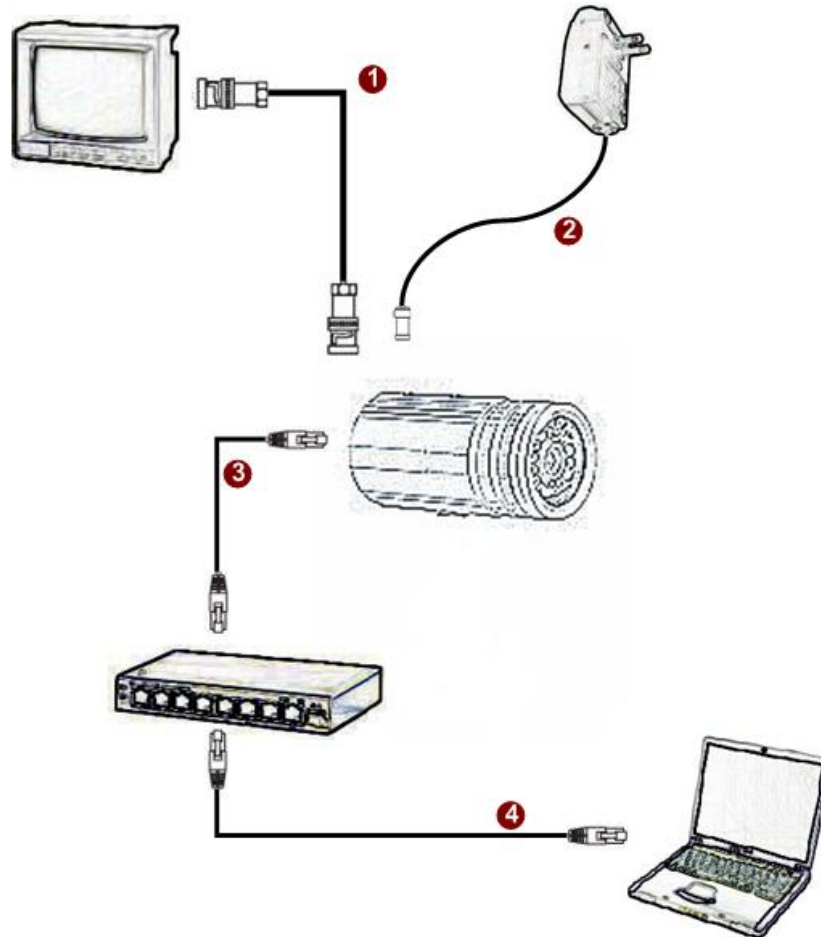

1. Connect the power adaptor to Megapixel IP IR DN PoE Bullet Camera
2. Connect Megapixel IP IR DN PoE Bullet Camera's ethernet port to an Ethernet (RJ45 connectors). If your Megapixel IP IR DN PoE Bullet Camera has PoE built-in, you can regard it as a PD and connect it directly to a PSE device like PoE switch.
3. Connect a PC to the Ethernet hub (RJ45 connectors)



**NOTE:** You may find a support package for help you getting familiar with PoE. Please visit our web site, and get the support document TS-00040.

## **1.4 Installation Procedure**

### **1.4.1 Install the camera onto bracket**



### **1.4.2 Rotate camera box counter-clockwise to remove camera cover**



### 1.4.3 Adjust the focus / zoom



- Zoom adjust lever

- Focus adjust lever



# 2


## Quick Tour

This section guides you with a quick tour on this Megapixel IP IR DN PoE Bullet Camera.

### 2.1 Configure this Megapixel IP IR DN PoE Bullet Camera

#### 2.1.1 Make sure network environment

Default IP of this Megapixel IP IR DN PoE Bullet Camera is 192.168.0.100. Please make sure this Megapixel IP IR DN PoE Bullet Camera and your PC are on the same network segment before running the installation.

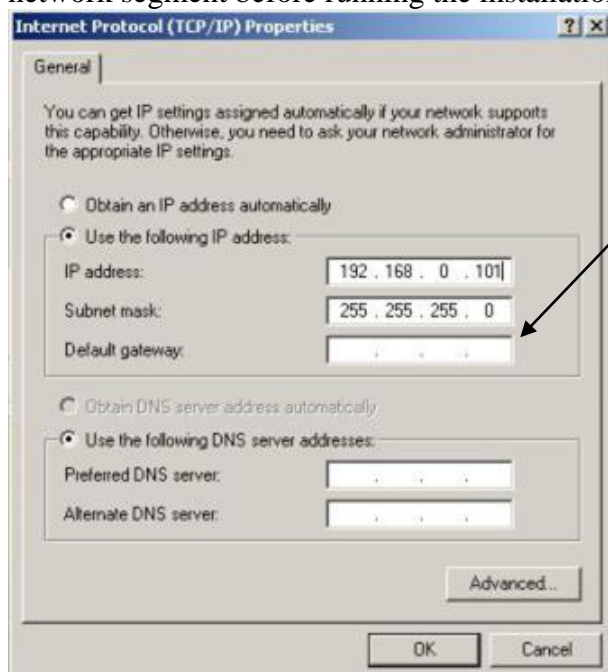


Please set the settings as below.

IP address: 192.168. 0.xxx

Subnet mask: 255.255.255. 0

(NOTE: xxx should be a number from 1 to 254, but 100 is excepted.)

#### 2.1.2 Open Internal Explorer with IP address

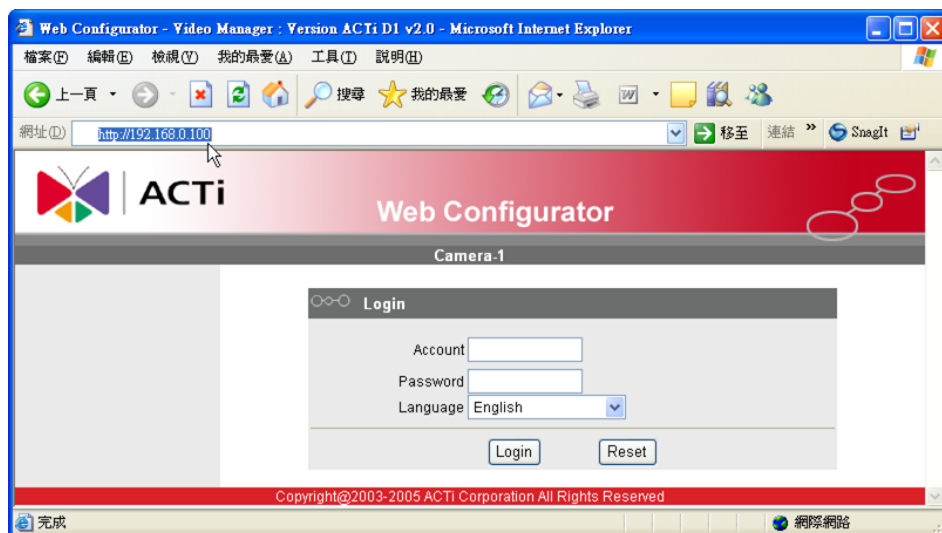

**NOTE:** If your web browser is earlier than IE6, then download IE6 is recommended.



**NOTE:** This Megapixel IP IR DN PoE Bullet Camera default IP address is set to 192.168.0.100

### 2.1.3 Login with default administrator's account & password




**NOTE:** Default administrator account is set to **Admin**, password is set to **123456**, and click **Login** button.

### 2.1.4 Preview the video



## 2.1.5 Set the new IP address


**ACTi**

Web Configurator

Camera-1

>> Video Display

>> Host Setting

>> WAN Setting

>> Date Setting

>> Video Setting

>> Video Adjust

>> User Account

>> System Info

>> Firmware

>> Factory Default

>> Save Reboot

>> Logout

Dynamic IP Address

Static IP Address

IP Address

Subnet Mask

ISP Gateway

User Name

Password

Apply

Reset

Primary DNS Server

Secondary DNS Server

Apply

Reset

DDNS Type

Service ISP

Host Name

User Name

Password

Apply



Reset

Copyright©2003-2006 ACTi Corporation All Right Reserved


\***IP Address** : The default IP address is 192.168.0.100.

\***Subnet Mask** : The default subnet mask is 255.255.255.0

\***Click**  button

	<b>NOTE:</b> In your Client PC, please make sure the setting of Network Connections Type is set to Auto Negotiation, since this Megapixel IP IR DN PoE Bullet Camera follows MII standard. Otherwise, you might not see the live image.
	<b>IMPORTANT:</b> After the IP address is changed, please record this IP address. There's no way to connect to the Megapixel IP IR DN PoE Bullet Camera if user forgets the new IP address.

## 2.1.6 Check Default Video Setting

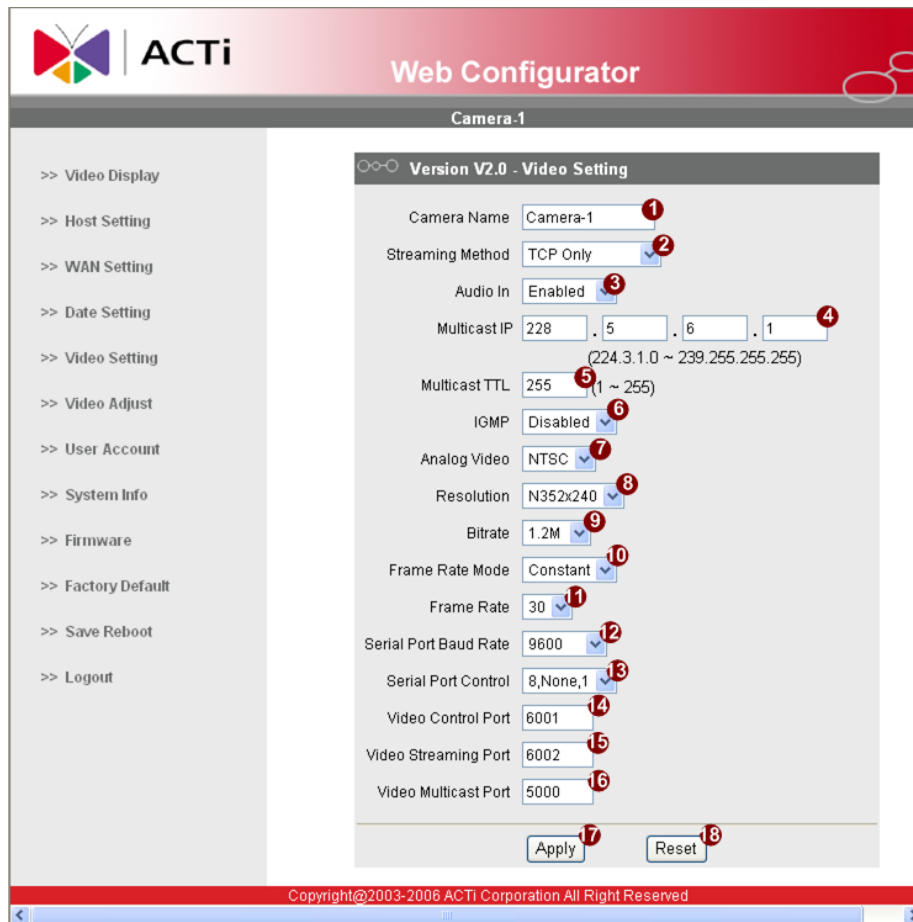

**2.1.7** Click **Save Reboot** to restore all settings and please wait about 30 seconds for system reboot.